無印良品

タグツール･歩数計

取扱説明書

シリコーンケースに入れて持ち運べる、旅に便利な単機能の道具です。
＊タグツール・シリコーンケース（別売）に入れてご使用ください。

●お買い上げいただきありがとうございました。
●ご使用前に、この取扱説明書を必ずお読みのうえ、正しくお使いください。
●この取扱説明書は必ず保管してください。

付属品
ボタン形リチウム電池 CR2032　1個
取扱説明書（本書）　1部

保証書付

取扱説明書番号　9ZYA08AZ（Y1402）

保証書

製品名　**タグツール･歩数計**

お買い上げ日　年　月　日

お客様 お名前

お客様 ご住所

TEL

保証書貼付用レシート貼付欄

〔保証期間〕お買い上げ日より1年以内

日本国内のみ有効です。
This warranty is valid only in Japan.

●レシートが未貼付の場合は無効です。
●ネットストアご購入の場合、お買い上げ日シール（店舗印）の同梱はございません。お買い上げ日は、ネットストアマイページ「注文履歴」にてご確認をお願い申し上げます。

■保証について

通常のお取り扱いで万一機械故障が生じました場合、保証期間中に下記までこの保証書を添えてお申し出下されば無料にて修理･調整いたします。ただし、次の場合は保証期間内でも有料修理になりますのでご了承ください。
（ご使用の際はこの取扱説明書を必ずお読みください。）

1）誤ったご使用による故障、またはお取扱いの不注意による故障
2）不適当な修理や改造による故障
3）火災または天災による故障
4）ご使用中に生じる外観上の変化（ケースの傷など）
5）本保証書のご提示がない場合（電池は保証の対象外です。）
6）修理の際、外観の違う代替品を使用させていただくこともありますのでご了承ください。

●この保証書は本書に明示した期間、条件のもとにおいて無料修理をお約束するものです。この保証書によってお客様の法律上の権利を制限するものではありません。

株式会社　良品計画
〒170-8424　東京都豊島区東池袋4-26-3
お客様室　0120-14-6404
平日10:00 ～ 21:00　土･日･祝 10:00～18:00

輸入元 リズム時計工業株式会社
〒330-9551　埼玉県さいたま市大宮区 北袋町 1 丁目 299 番 12
お客様相談室　0120-557-005
受付時間 9:00 ～ 17:00 土日、祝日、年始年末、夏季休日を除く

⚠警告 小さなお子様の手の届く所に置かない
製品や電池、電池ぶたなどを口に含んだり誤飲するおそれがあります。万一、飲み込んだときは、すぐに医者の治療を受けてください。

⚠注意 防塵、防水仕様ではありません。
水に濡れたりすると故障の原因になります。

＊図は操作説明用ですので、実際の商品と異なることがあります。

1. 各部の名称と役割

2. 電池のセット（電池の交換）

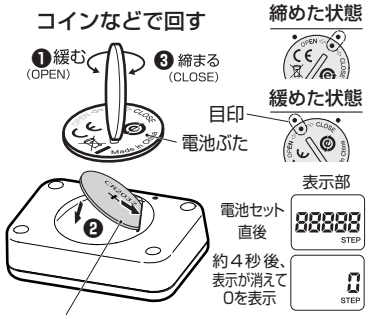

＋を上にして斜めに挿し込む
ボタン形リチウム電池　CR2032　1 個使用

❶電池ぶたを左に回して取る。
❷電池の+表示を上にして入れる。
❸電池ぶたを右に回して締める。
※電池が取り出しにくいときには、すきまに楊枝など細い棒を差し込んで、電池を持ち上げてください。
※金属製のピンセットを使用しないでください。電池がショートすることがあります。

歩数計について

■ 最大99999歩まで測定
●99999歩に達すると点滅し、測定を停止します。歩数をゼロに戻してください。

■ 歩数の表示、非表示
●電池の消耗を抑えるため、約70秒振動を感知しないと表示が消えます。
●リセットを押すか、振動を感知すると表示を再開します。

■ 歩数をゼロに戻すには
●リセットを3秒以上押し続けると、歩数がゼロになります。
●電池を取り出すか、電池切れになると歩数はゼロになります。

■ 歩数のカウント
●誤ったカウントを防ぐため、歩き始めの10歩程度は歩数表示が変わりません。連続して歩行すると変わります。

実際に歩いてみましょう

■歩数をより正しくカウントさせるには
●歩数計がぶらぶらした状態では誤差が大きくなります。歩行の動きをより正しく捉えるため、腰部のベルトにしっかり取り付けることをお勧めします。
●背筋を伸ばし、足をまっすぐに伸ばして、踵から着地して、一定のリズムで歩く。

次のような場合正しく測定できません。
●雑踏の中など不規則な歩行。
●すり足で歩く、非常にゆっくり歩く。
●階段や急斜面の歩行。
●かばんの中など歩数計が固定されない所。
●電車、車、自転車などに乗車しているときに、振動により誤ったカウントをすることがあります。

■使い終わったら取り外す
●誤って衣類と一緒に洗濯しないようにしてください。

⚠注意　サッカーやランニングなど動きが速く、激しい動きを伴う場合、正しく測定ができません。またケガを防ぐために、歩数計を取り外してください。

故障かな?

■ 歩いているのに歩数表示が変わらない。
手に持って歩数を見ながら歩くと、手が振動を吸収してしまいカウントできないことがあります。

■ ほかの歩数計と一致しない。
歩数計の機種やメーカーにより、しくみや感度が異なっています。この歩数計は、実際の歩数に対して±5%程度の違いが発生することがあります。また、取り付ける場所や取り付け方によっても差異が生じることがあります。

■ 電池が無くなるのが早い。
常時携帯していると振動により、表示状態になり電池の消耗を早めます。

■ "Err"と表示された。
電池を取り出して、入れ直してください。

■ 表示が欠けている
静電気の影響で誤作動した可能性があります。電池を取り出して、入れ直してください。また、電池の残量が少なくなると表示が薄くなったり、欠けたりします。電池を新しいものに交換してください。

■ 表示が薄いまたは濃い
液晶表示は、0℃未満では薄くなったり、消えたりします。40℃を超えると濃くなったり、むらになったりします。0～40℃の温度になれば正常に表示します。

お手入れについて

●汚れがひどいときは、水でうすめた中性洗剤や石けん水を、やわらかい布に少量つけてふき取り、その後、からぶきしてください。
●ケースなどの汚れ落としに、ベンジン、シンナー、アルコール、スプレー式クリーナー類は、使用しないでください。

安全上のご注意

よくお読みのうえ、必ずお守りください。

図記号の説明
⃠は、禁止（してはいけないこと）を示しています。
❗は、指示する行為を必ず守ることを示しています。

⚠警告 死亡または重傷などを負う可能性が想定される内容

禁止　電池の液漏れや発熱、破裂を防止するために、次のことを守る
●電池をショートさせない。●分解しない。
●電池に傷をつけない。●電池を充電しない。
●電池を加熱しない。●火の中に入れない。

電池から漏れた液に触れない
●失明や炎症などの障害が発生する危険性があります。目や皮膚についたら、すぐに水道水でよく洗い流して医師の治療を受けてください。衣服に付着した場合は、すぐに水道水で洗い流してください。
●漏れた液に直接触れないでください。
電池を外して、漏れた液を布や紙でよくふき取ってください。修理が必要なときは、お買い上げの販売店にご相談ください。

⚠注意 傷害を負う可能性または物的損害が発生する可能性が想定される内容

禁止　強い振動や落下など衝撃を与えない
故障や破損の原因になります。

ぬれた手で触らない
さびの発生や故障の原因になります。

浴室やサウナ、岩盤浴、温室など、高温・高湿になる所では使わない
さびの発生や故障の原因になります。

分解禁止　分解や改造をしない
けがや故障の原因になります。

禁止　下記のような場所では使わない
部材の変形、変質、劣化、故障の原因になります。
●直射日光が当たる所。
●暖房器具等の熱風や火気に近い所。
●温度が+40℃以上の所。
●温度が−10℃以下の所。
●ほこりが多く発生する所。
●プール、温泉場などガスの発生する所。
●調理場など多くの油を使用する所。
●ゴムや軟質のポリ塩化ビニルに長い間、直接ふれさせておくと、色移りや付着、変質をすることがあります。

必ず守る　電池からの液漏れを防ぐために次のことを守る
●使い切った電池は速やかに取り出してください。
●長期間使用しない場合は、電池を取り出してください。

電池の寿命について

●付属の電池は、工場を出荷するときに入れていますので、製品仕様より短い期間で電池切れになることがあります。

電池、製品の廃棄について

●お住まい地区自治体の指定に従ってください。
●電池と本体を分別して廃棄してください。

製品仕様

使用環境温湿度：−10～+40℃、85%RH以下
※結露しないこと
液晶表示可読温度：0～+40℃
電源：CR2032（3V）1個
電池寿命：約10ヵ月
使用条件　1日あたり8時間歩数をカウント
（液晶表示が16時間/日消灯）
表示方法：LCD表示
検出方法：3軸加速度センサー
表示内容：歩数　0～99999歩
歩数精度：±5%　（振動試験機による）
外形寸法：45（幅）30（高さ）13（厚み）mm
質量：16g　（電池を含む）
材質：ケースABS/透明カバーPMMA
防水機能：なし

○製品仕様は改良のため予告なく変更することがあります。

MUJI

TAG TOOL•PEDOMETER

User's Manual

Product is a travel-friendly, single function tool which may be kept inside a silicon case and carried.
* Please use the product together with TAG TOOL•SILICON CASE (sold separately).

- Thank you for your purchase.
- In order to use this product properly, please first read this User's Manual before use.
- Please keep this User's Manual stored in a handy location even after reading it, and refer to it when necessary.

Accessories

Type CR2032 button cell Lithium batteries	1
User's Manual (this sheet)	1 page

User's Manual number 9ZYA08AZ (Y1402)

CE This product complies with the EMC requirements of the European Community.

The symbol on the product, packaging, and/or accompanying document indicates that this product should not be disposed with normal household waste. This product shall be taken to the applicable collection point for recycling. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health. For more information about recycling of this product, please contact the shop where you purchased the product, or your local authority.

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste.
Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps to prevent potentially negative consequences for the environment and human health.

Safety advice

Prior to use, please thoroughly read and follow these safety instructions.
Explanation of symbols
⃠ This symbol indicates prohibited conduct.
❗ This symbol indicates compulsory items.

⚠WARNING WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

In order to prevent leakage of liquid, over-heating or rupture of battery, please obey the following.
Prohibited
- Do not short-circuit the batteries.
- Do not disassemble.
- Do not damage the batteries.
- Do not re-charge the batteries.
- Do not heat the batteries.
- Do not expose to fire.

Do not touch the liquid leaking from the batteries.
- It poses the risk of injuries such as loss of eyesight or inflammation. If the liquid comes into contact with eyes or skin, wash immediately with tap water and seek treatment from a doctor. If the liquidis attached to clothing, please wash it off immediately with tap water.
- Do not touch the liquid directly. Remove the batteries and wipe the liquid off thoroughly with cloth or paper.

⚠CAUTION CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

Do not drop or subject the product to strong impact.
Prohibited This may cause damage or malfunction.

Do not touch with wet hands.
This may cause rust or malfunction.

Do not use in locations with high temperature and humidity, such as in a bathroom, sauna, bedrock bath or greenhouse.
This may cause rust or malfunction.

Do not perform repairs, disassembly or modifications.
Disassembly prohibited This may cause injury or malfunction.

Do not use the product in the places listed below.
Prohibited This may cause the product to deform, deteriorate, or malfunction.
- Locations exposed to direct sunlight.
- In the proximity of fire or heat from heating appliances.
- Locations with temperatures above +40°C (+104°F).
- Locations with temperatures below 0°C(+32°F).
- Locations where there is a lot of dust.
- Locations with a lot of gas such as swimming pools or hot springs.
- Locations where a large quantity of oil is used such as toasters, microwave ovens, electronic cookers, or ventilation hoods.
- Direct contact with rubber or polyvinyl chlorides for long periods may cause the product to stain, stick or deteriorate.

In order to prevent leakage of battery liquid, please obey the following.
Compulsory
- Please remove the batteries from the product when it has run out.
- Please remove the batteries when the product is not being used for a long period of time.

⚠WARNING Keep product out of the reach of small children.
It may cause accidental swallowing of the product, battery or the battery cover. If accidental swallowing occurs, please seek treatment from a doctor immediately.

⚠CAUTION Product is not waterproof or dust-proof.
Getting the product wet may cause malfunction.

* Image is for the purposes of operating instructions, and may vary from actual product.

1. Part names and functions

2. Setting the battery (exchanging the battery)

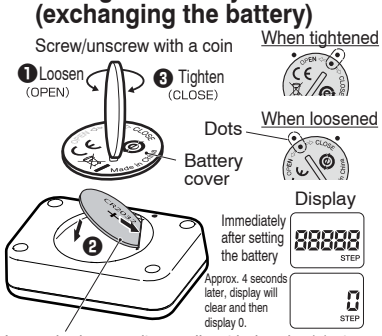

Insert the battery diagonally with the plus(+) sign facing up before pushing it in place.
1 Type CR2032 button cell Lithium battery will be used.

❶ Remove the battery cover by turning it in an anticlockwise direction.
❷ Insert the battery with the plus(+) sign facing up.
❸ Tighten the battery cover by turning it in a clockwise direction.

* If you have difficulty removing the battery, please insert a thin insulating rod such as a toothpick to lift the battery from the compartment.
* Please do not use metallic pins. The battery may short circuit.

Regarding the pedometer

■Measures up to 99999 steps
- Display will start blinking and stops measuring when 99999 steps have been reached. Please reset the counter to 0.

■Display/non-display of steps
- In order to reduce battery consumption, the display will turn off if it does not detect any vibrations for approx. 70 seconds.
- Display will restart if the reset button is pressed or if it detects vibrations.

■How to reset the counter to 0
- Press and hold the reset button for 3 seconds or more to reset the counter to 0.
- Counter will reset to 0 if the battery is removed or depleted.

■Step count
- In order to prevent accidental counting, the counter display will not change for approx. the first 10 steps. Display will change with continuous steps.

Using the pedometer

■In order to count steps accurately
- Inaccuracies will be greater if the pedometer is not secured and moves irregularly. In order to ensure accurate reading of steps, we recommend that you fasten the pedometer securely to your waist belt.
- Stretch your back, reach straight forward with your feet, land on your heels, and maintain a consistent pace.

■Steps cannot be counted correctly in the following cases.
- When walking at an inconsistent pace such as in crowded places.
- When shuffling or walking extremely slowly.
- When walking on stairs or a steep slope.
- When the pedometer is not secured, such as being placed inside a bag.
- Vibrations on the train, car, or bicycle may cause erroneous counting.

■Remove after use.
- Please do not accidentally wash the pedometer together with clothes.

⚠CAUTION Steps cannot be measured accurately during activities with quick and aggressive movements, such as football or running. Also, in order to prevent injury, please remove the pedometer during exercise.

Troubleshooting

■Display does not change while walking.
When the pedometer is held in the hand while walking, steps may not be measured as the vibrations are absorbed by the hand.

■Counter does not match with other pedometers.
The structure and sensitivity of pedometers vary depending on models and makers. The counter of this pedometer may have a difference of approx. ±5% compared to the actual number of steps taken. Also, erroneous counting may occur depending on the location and way the pedometer is attached.

■Battery depletes quickly.
Constantly carrying the pedometer around will cause the display to remain on due to the vibrations and speed up battery consumption.

■Display shows "Err".
Please remove and insert the battery again.

■Portions of display missing
The display may have malfunctioned due to static electricity. Please remove and insert the battery again. Low battery levels may also cause the display to become dim or have missing portions. Please replace with brand new battery.

■Display is dim/too dark.
Liquid crystal displays may dim or disappear at temperatures below 0°C (+32°F). At temperatures above +40°C (+104°F), the display may become darker or distorted. Display will function normally between the temperature range of 0°C ~ +40°C (+32°F ~ +104°F).

Concerning maintenance

- If the exterior of the body becomes dirty, remove the dirt by wiping with a cloth slightly dampened with water-diluted neutral detergent, and clean with a dry cloth afterwards.
- Never use benzene, paint thinners, alcohol or spray cleaners or other solvents to remove the dirt on the case.

Regarding battery life

- As the batteries are inserted at the time of shipment from the factory, there are cases when the battery life is short.

Disposal of batteries and product

- Please dispose of the batteries and the body separately according to the local rules.

Specifications

Usable temperature and humidity range:	-10°C ~ +40°C (+14°F ~ +104°F), 85% RH or less * No condensation
LCD operating temperature range:	0°C ~ +40°C (+32°F ~ +104°F)
Power source:	CR2032 (3V) 1
Battery life:	Approx. 10 months Usage conditions 8 hours of step counting per day (LCD is off for 16 hours/day)
Display:	LCD (Liquid crystal)
Detection method:	Triaxial accelerometer sensor
Display contents:	Number of steps 0 ~ 99999 steps
Accuracy:	±5% (From vibration test equipment)
Size:	4.5cm wide x 3cm high x 1.3cm thick (1.8in wide x 1.2in high x 0.5in thick)
Product weight:	16g/0.03lb (including battery)
Materials:	Case ABS / Transparent cover PMMA
Waterproof function:	None

○ Product specifications are subject to change without prior notice for the sake of making improvements.